

# Laundry Card Kiosk Instructions



The laundry machines at this property use a contactless laundry card system.

## Buy a new laundry card:



Press **Buy Card** on the display (new card cost will be displayed)




Follow instructions on the screen to purchase with your credit/debit card

*New cards purchased from kiosk contain \$0 value and must be loaded with funds.*


## Add value to laundry card:



Hold your Laundry Card near the display (the card balance will appear)

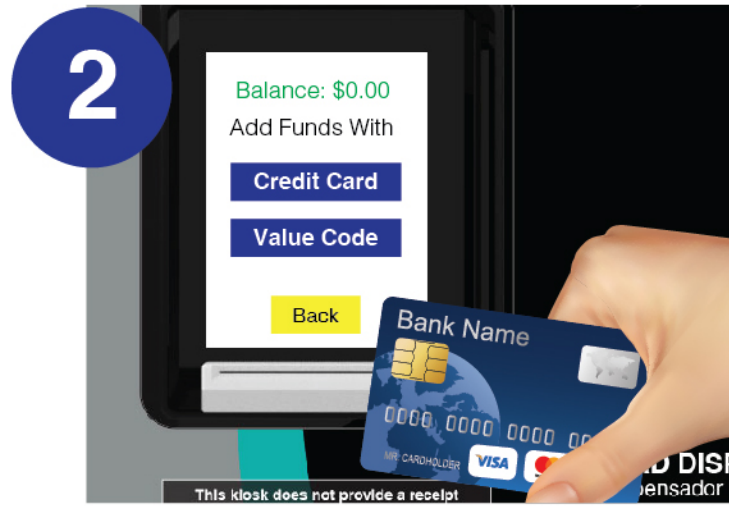

Follow instructions on the screen to use your desired payment option or enter a value code.

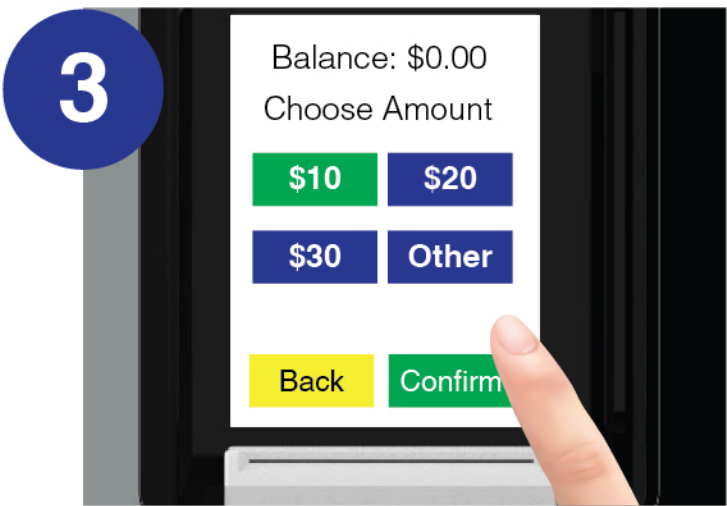

**Select** and **Confirm** the amount of value you want to load on the Laundry Card



Follow the instructions on the screen and hold your Laundry Card near the display to finish adding value